

INSTALL STEPS



ARM



BASE A BASE B



TRAY




HEXKEYs MAXIS SCREWS




KNOBS PROTECT PADS




L CLIPs ARROW CLIPs

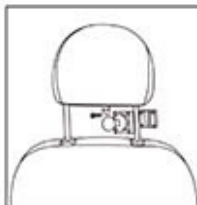

1. Screw the BASE A and BASE B on the headrest support with 4 BASE SCREWS.

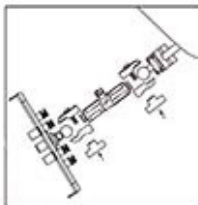


2. Combine the BASE A with ARM by switching BASE KNOB.

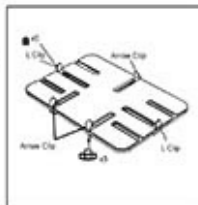

3. Stick the L CLIPs and ARROW CLIPs with PROTECT PADS and screw onto the TRAY with KNOBS.



4. Screw the TRAY with ARM and adjust the knobs to make TRAY into perfect position.

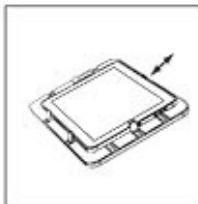

5. Only adjust the upper TRAY KNOB to put in or take out the pad or the other electronic device.

CAUTION

*Please be sure to fasten all the screws to the tightest when using the stand.

*Not for use while driving.

Max loading :1KG

INSTALL STEPS



ARM



BASE A BASE B



TRAY



HEXKEYs MAXIS SCREWS




KNOBS PROTECT PADS




L CLIPs ARROW CLIPs



1. Screw the BASE A and BASE B on the headrest support with 4 BASE SCREWS.

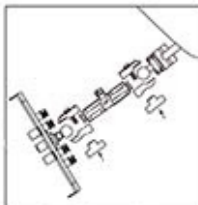

2. Combine the BASE A with ARM by switching BASE KNOB.

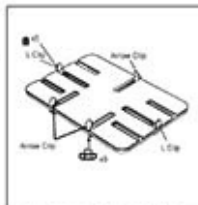

3. Stick the L CLIPs and ARROW CLIPs with PROTECT PADS and screw onto the TRAY with KNOBS.



4. Screw the TRAY with ARM and adjust the knobs to make TRAY into perfect position.



5. Only adjust the upper TRAY KNOB to put in or take out the pad or the other electronic device.

CAUTION

*Please be sure to fasten all the screws to the tightest when using the stand.

*Not for use while driving.

Max loading :1KG